



Soffit Box Installation

1. GLUE IN PLACE INSIDE THE PLASTIC SOFFIT SO THE CUT OUT BECOMES A NEST FORM:

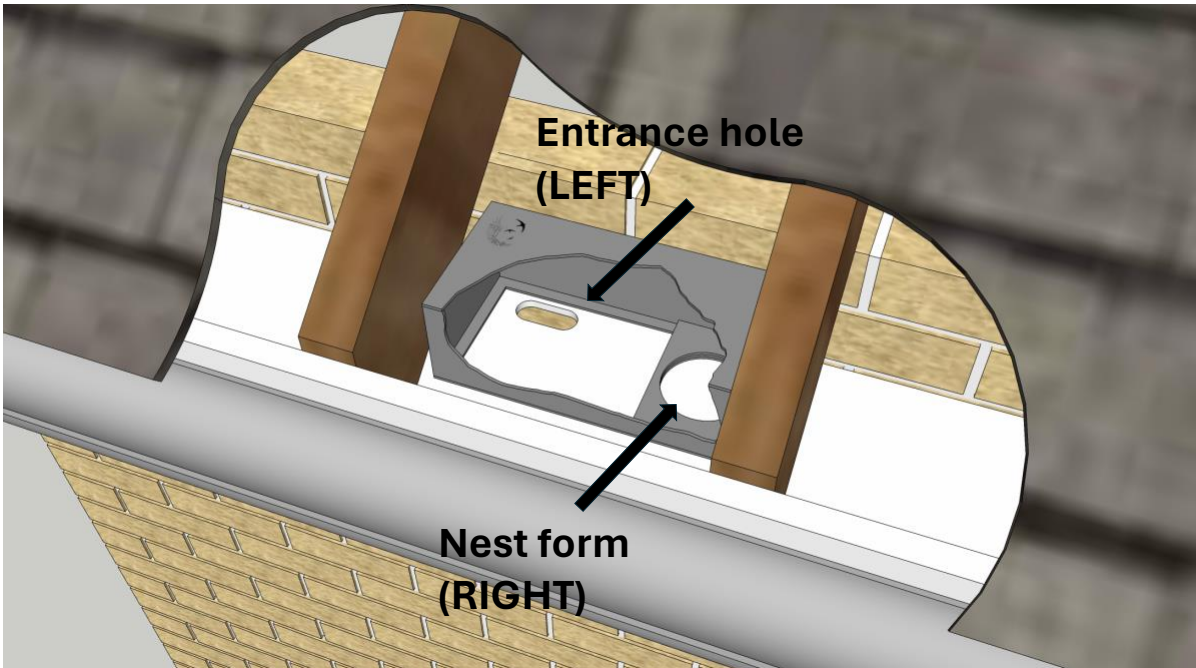

2. THE ENTRANCE HOLES NEED TO BE AT THE OPPOSITE END OF THE BOX TO THE NEST FORM. (IF NOT, BIRDS AND CHICKS CAN FALL OUT)

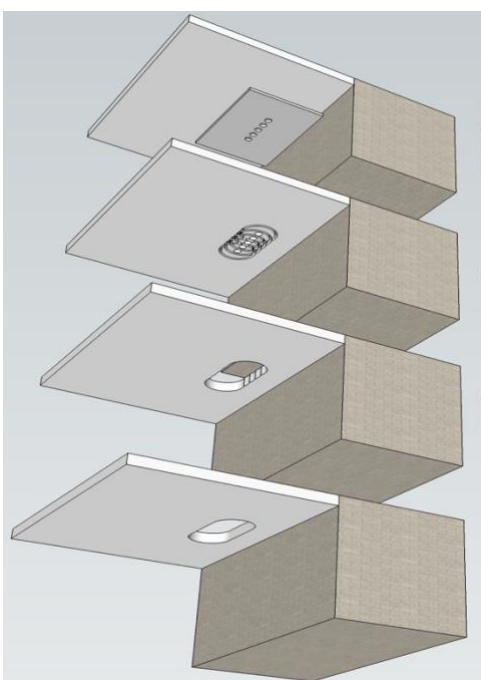

3. DRILL ENTRANCES 20MM FROM WALL

Use the template provided to drill 5 pilot holes, **20mms away from the wall.**

Use 29mm hole saw to advance 5 holes.

Carefully complete drilling of 5 holes

Finish with a file:

Entrance size 66mm x 29mm

Distance from wall 20mm